


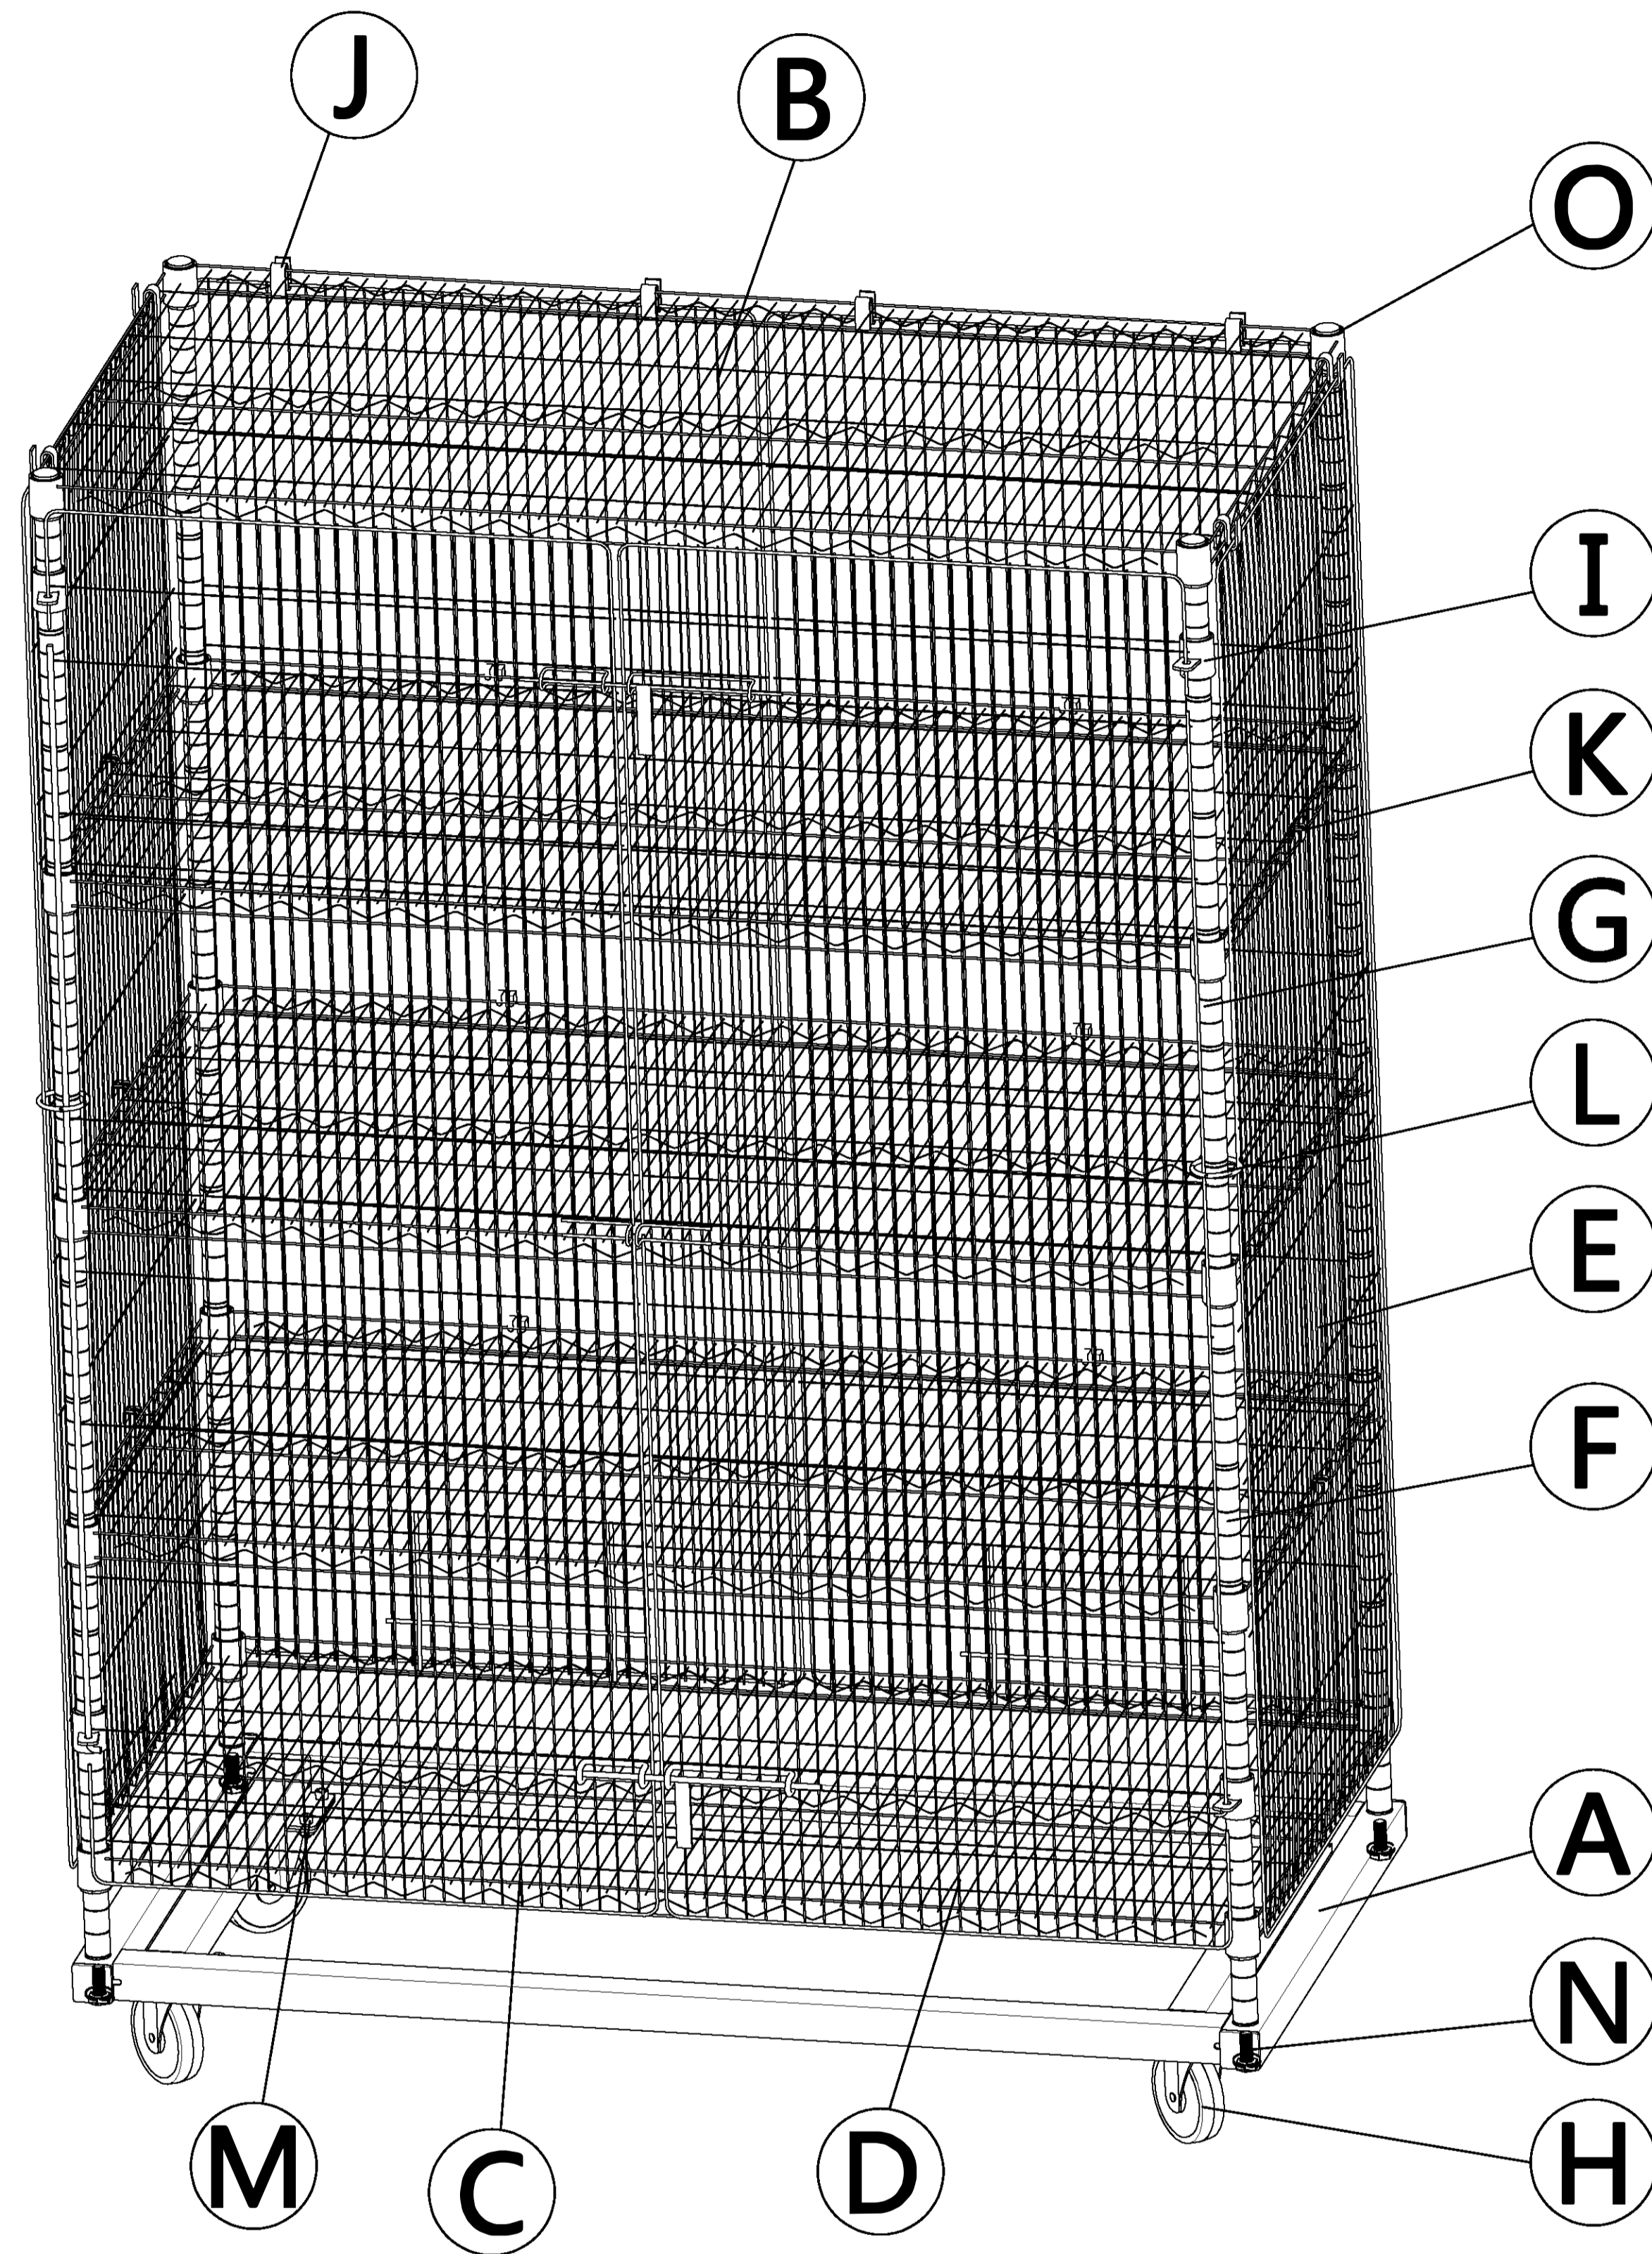

ASSEMBLY STEPS:

SECURITY CART  
WCS-TR008



**1** Screw the Wheels with Flat Brackets (H) to the bottom of the Iron Base (A) by Screws and Nuts (M).

**2** Insert the Lower Pole (F) into the four holes in the corner of Iron Base (A) by Hexagonal Screw(N).

**3** Snap the Plastic Clips (O) into the Pole grooves at the same position of each Pole and ensure the Plastic Clips must be snapped together with the small tapered side facing up. Please make sure that you have the Wire Shelf (B) the correct way up. Hold the shelf on its side and slide the top of four lower Poles through the bottom of each shelf at its corners until there is a snug fit. After the four Poles have been slid through the shelf collar holes, set the shelf upright.

**4** Snap the Plastic Clips (O) on two Lower Poles (F) at the front, then slide two piece Collar Bracket(I) from the pole top until there is a snug fit as the photo.

**5** Snap the Plastic Clips (O) at your next desired shelf height and Slide the second Wire Shelf (B) from Pole top onto the assembled plastic clips. Repeat to assemble the 3rd shelf.

**6** Screw the Upper Pole(G) into the Lower Pole(F) using the connectors which are already assembled into the Upper-Pole(G).

**7** Slide down the Sidersphere (L) from two pole top at the front as the photo.

**8** Repeat the step 5) to assemble the 4th Wire shelf (B).

**9** Snap the Plastic Clips (O) on two Upper Poles(G) at the front, then slide two piece Collar Brackets(I) from the pole top until there is a snug fit.

**10** Repeat the step 5) to assemble the 5th Wire shelf (B) at the top.

**11** Hang the side wire rod of Left Door Wire Grid Panel(C) through the hole of Collar Brackets(I) from the top to the bottom and make sure two Collar Brackets(I) are assembled onto Left Door Wire Grid Panel(C).

**12** Repeat the step 11) to assemble the Right Door Wire Grid Panel (D).

**13** Put the N-hook (J) onto the frame of top Wire shelf at left side, right side and back side as the photo.

**14** Put the Wire Grid Panel (E) on the N-hook (J), one piece on the left, one piece on the right, and two pieces on the back side.

**15** Open the Sidersphere (L) and fasten it onto the side line of Wire Grid Panel (E) at the left door, and repeat to assemble the Right Door Wire Grid Panel (D).

**16** Fasten the U-Clip (K) to the side line of Wire Grid Panels at the left, right, back and front side to make it more secure.

No.	A	B	C	D	E	F	G	
Name	Iron Base	Wire Shelf	Left Door of Wire Grid Panel	Right Door of Wire Grid Panel	Wire Grid Panel	Lower Pole	Upper Pole	
Quantity	1PC	5PCS	1PC	1PC	4PCS	4PCS	4PCS	
No.	H	I	J	K	L	M	N	O
Name	Wheels with Flat Brackets	Collar Bracket	N-hook	U-Clip	Sidersphere	Screws And Nuts	Hexagonal Screw	Plastic Clips
Quantity	1SET	4PCS	8PCS	16PCS	2PCS	16PCS	4PCS	48PCS