
## wcs-gmedtech.com


## 2 Tiers Work Table Rack WCS-T008

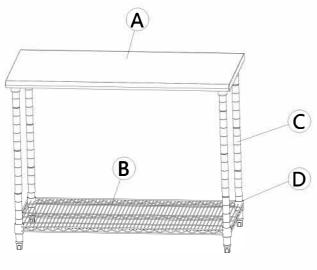


NO.	Α	В	С	D
NAME	Stainless Steel Plate	Wire Shelf	Pole with Leveling Feet	Plastic Clip
PARTS				
QTY	1PC	1PC	4PCS	16PCS

## **Assembly Steps:**


Snap one pair of Plastic Clips (D) on the same grooves of each Pole with Leveling Feet (C) assembled.

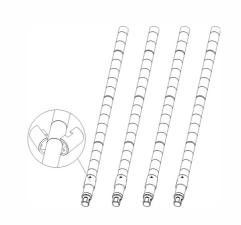

Set the rack upright. Refer to Step ① to snap one pair of plastic clips on the top of each pole.

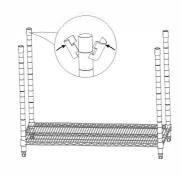

2 Hold the Wire Shelf (B) on its side and slide it from the top of each pole down onto the plastic clips until there is snug fit.

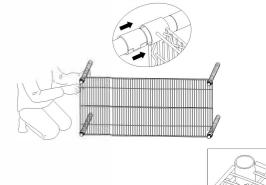

Put the Stainless Steel Plate (A) down onto the top of the rack until all plastic clips are well inserted the four collars welded under the stainless steel plate. Push firmly down on the shelf at its corner by rubber mallet to ensure the shelf in a place over plastic clips.

